# Introduction to Hardware of Z9X


# **Device Interface**

Zidoo Z9X is equipped with audio and video input & output ports and data transmission ports. Please refer to the descriptions in this manual


#### 1. Front




#### 2. Right

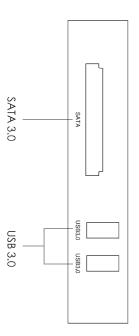

#### 3. Left

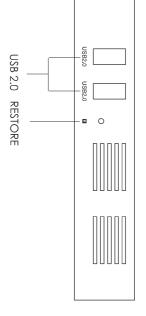

#### 4. Back

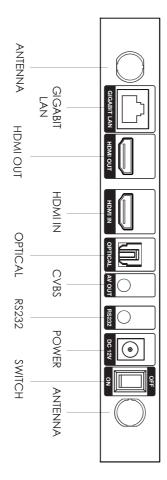

#### NO+0.

- \* Please load/change the hard disk after turning off the power. If it is a brand-new hard disk, please load it after formatting it.
- $^{\ast}$  Do not touch any liquid in case the liquid runs into the inner part of the device and damage it.
- \* Any maintenance personnel who are not appointed are not allowed to open the case.

Page 12

Page 13

## Device Connection

# 1. Connect HDMI Cable to TV

1) Cut off the power . Please make sure the power of the TV and STB are off.



2) When the TV is turned off, please connect HDMI OUT port on Zidoo to HDMI IN port on TV.






3) Connect with the power. This device is equipped with suitable DC power adapter. Please connect the head of DC power adapter to the DC power input port of this device, then insert the plug of DC power adapter into the socket of 110V – 240V.



Page 14

4) Corresponding video source is selected by TV.

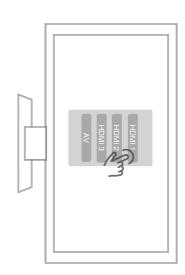


# 2. Connect AV Cable to the TV

The connection method is same as connecting HDMI cable



# 3. Assembly Sequence to Connect RS232 to 3.5mm Connector

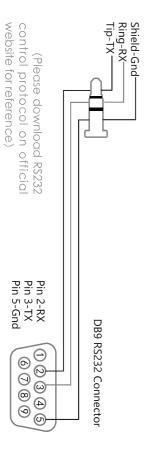

Page 14

Page 15

# **Z9X Specification**

Front Display	LED
Shell	Aluminum Alloy
SO	Android 9.0
СРИ	Realtek RTD1619 ARM Cortex-A55 (Hexa-core)
GPU	ARM Mali-G51 MP3
Memory	2GB DDR4
Internal Storage	16GB eMMC
Bluetooth	BT 4.2
WIFI	2.4G + 5G dual-band WiFi, 802.11 a/b/g/n/AC 2T2R MIMO 867Mbps
Ethernet	1*RJ-45 Ethernet Jack (10/100/1000Mbps)
HDMI Output	HDMI 2.0a, support up to 4K @ 60p, HDR, 12Bit, YCbCr 4:4:4 color range, support audio pass-through
HDMI Input	HDMI 2.0, support 4K@60p, PCM audio
Video Decoder	4K@60p,HEVC/H.265,12Bit, HDR10, HDR10+, Dolby vision
Audio Decoder	Support high-definition audio pass-through and audio decode
Intelligent Control	Mobile APP control, RS-232, TCP/IP control and WOL support
SATA	1*SATA 3.0
USB	2*USB 3.0, 2*USB 2.0
Power	DC 12V / 2A
Other Interface	1*IR Receiver, 1*3.5(mm)AV Out), 1*SPDIF(2CH, 5.1CH),1*3.5(mm) RS232, 2* External High-Gain Antenna


Page 16

### Initialization

Before actually using this device, you will be provided with this software for the first initialization. Please set your device according to the initialization process to obtain the optimum watching experience.


## 1. System Language

Select the language of the system as you want.

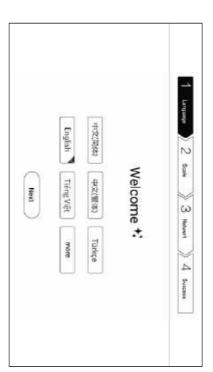


## 2. Screen Scaling

Adjust the screen display range using LEFT or RIGHT button of the remote control (Mouse Wheel) so that the image can be appropriately displayed on the screen of the TV.

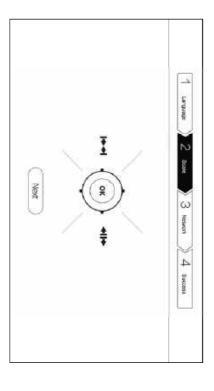

## 3. Network Setting

Set the configuration of the network so that the device can quickly connect with the network. The network includes WIFI network and Ethernet network. Select either of them and successfully connect with it.

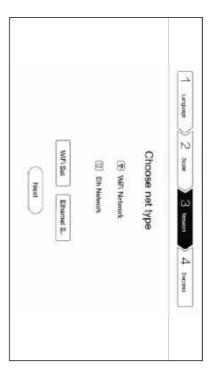

WIFI: Select SSID and enter password, connect to WIFI and finish setting.


Ethernet Network: Insert the network cable and then Internet will be connected automatically. After completing the network setting, it will show "Set success" and enter into Home Page. Initialization setting is finished.



Page 18


# **OTA System Update**

Before actually using this device, you will be provided with this software for the first initialization. Please set your device according to the initialization process to obtain the optimum watching experience.

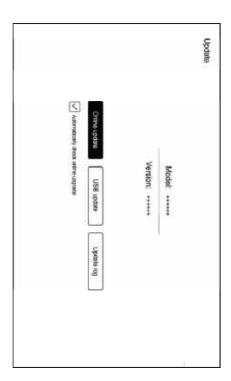

## 1. Online Update

Click "Online Update" to obtain information of online update.

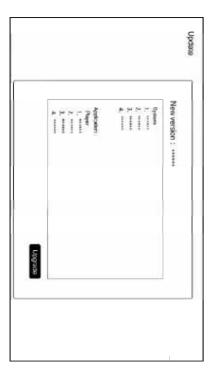





#### 2. Local Update

Users can download the update files on the forum or official website and update firmware through files.


Copy the downloaded update file to USB disk. Click "USB update" to select the update file.

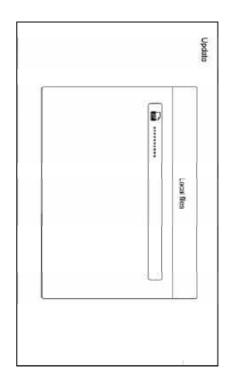


Download the update files by online update or local update. Click "Update" to update it.

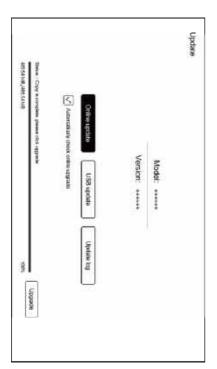

The system will automatically check the update file whether is completed or not.

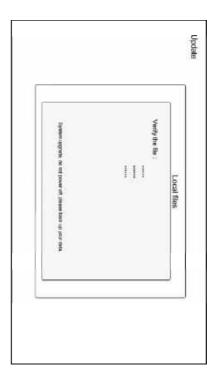

**Note:** Automatically access to system upgrade. Please don't power off in the progress.

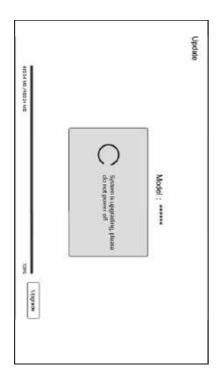

Page 20



restart. Once the update process is completed, the system will automatically



### **Special Note:**

product. aperiodicity. Therefore, this manual may not be totally in line with the To guarantee user experience, Zidoo will update the firmware

Page 22

## Guarantee 保修卡

#### User File 用户信息

	Fault description 故障说明
Model NO. 型号	Commodity name and specification 产品名称
Dip Dip	Telephone 联系电话
	Address 回寄地址
Sex 性别	User name 用户姓名

#### Guarantee Item 保修条款

- (1) One year guarantee from date of purchased. (not including fittings)
- (2) All of damage by man-made(tear open the housing tear off the sticker, unnormally using), or losing this card, we will not guarantee.
- (1) 保修期限:本产品遵循国家三包条例,商品存在非人为损坏所引起的硬件故障,本公司将提供一年保修服务(配件除外)。
- (2) 如需寄回本公司维修,请与此保修卡—同寄回。(3) 一切人为因素造成的损坏(包括擅自拆机,撕毁标签,自行刷机等),本公司将不予保修。

